

Rally Time Keeper II PC 設定アプリ [RTK II] 取り扱い説明書

1. 概要

PC の設定を WindowsPC ・ WindowsTablet で作成し、通信ユニット(MONOSTICK) を 使用し、Rally Time Keeper II に転送するアプリです

2. 構成

弊社ホームページよりアプリ [RTK II] をダウンロードしてください

※ 本アプリは、実行ファイルのみで動作します

※ 本アプリは、ファイルを作成し、アプリと同じフォルダに保存します

弊社にて通信ユニット(MONOSTICK) をご購入頂いた場合はそのまま使用できます

※ MONOSTICK を弊社以外で購入した場合は、設定が必要になります




3. 操作方法

アプリを起動する前に通信ユニット(MONOSTICK) を接続してください

3-1. アプリの起動

アプリをダブルクリックして起動します

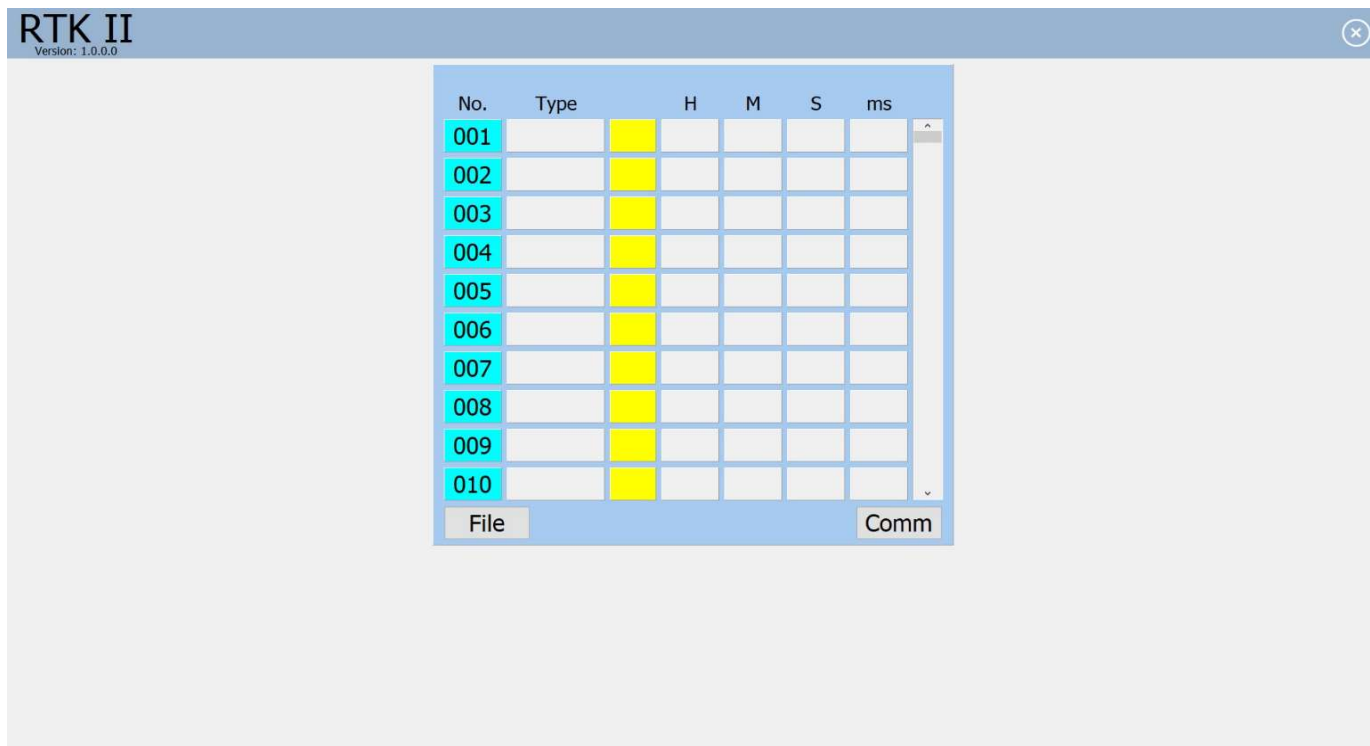


3-2. アプリの終了


アプリを終了するには、右上の [X] をクリックします

3-3. Type の選択

Type の枠をクリックすると、コンボボックスが表示されます
コンボボックスをクリックして Type を選択します

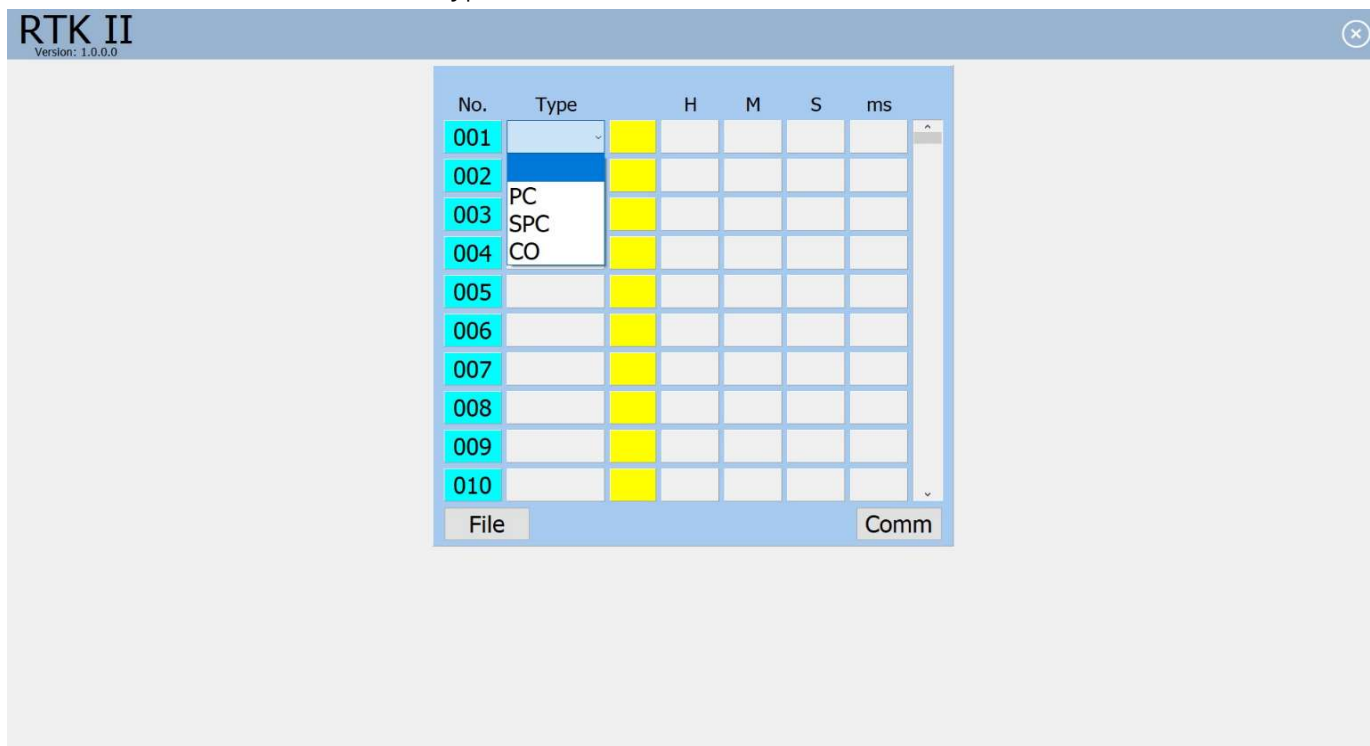

3-4. 時刻・時間の設定

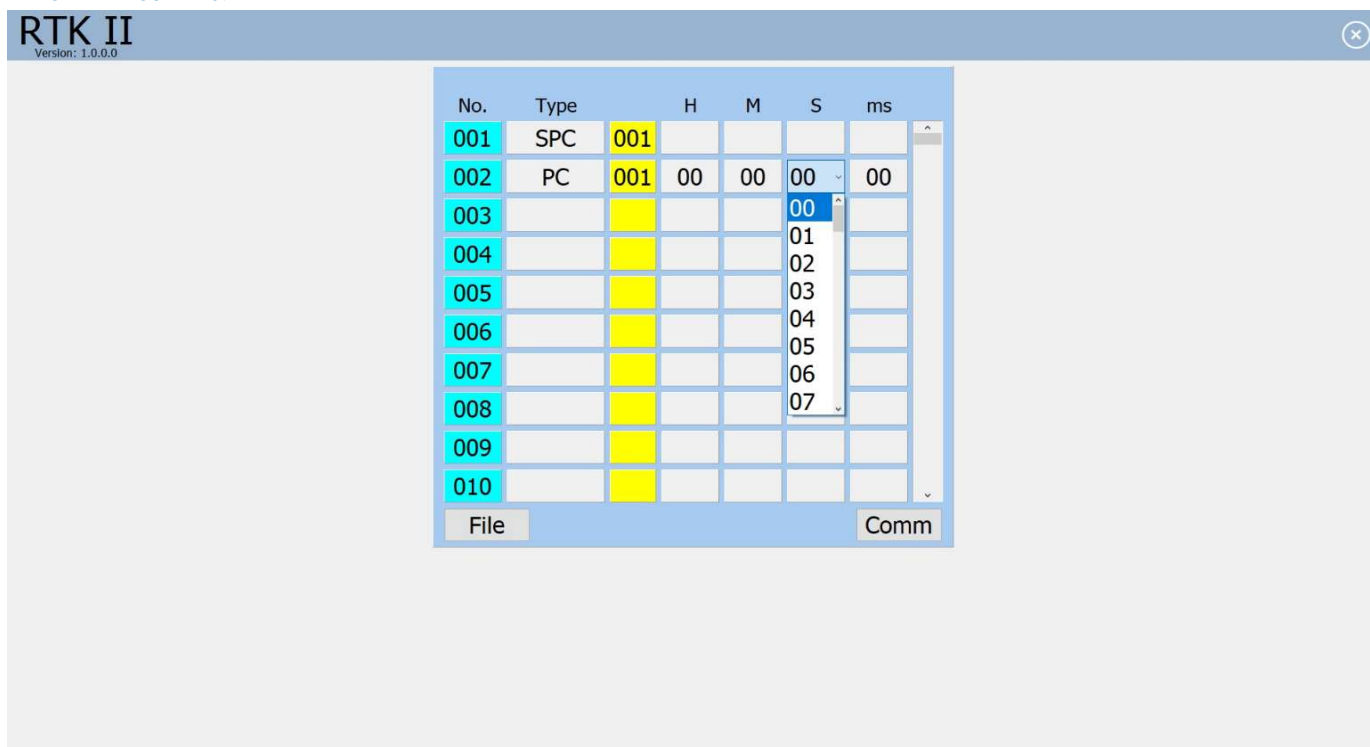

Type が PC・CO の場合、H・M・S・ms の設定ができます
最大 255 行まで設定できます

3-5. 設定の保存

設定を保存するには [File] をクリックします

The screenshot shows the RTK II software interface. At the top, it says "RTK II Version: 1.0.0.0". Below this is a table with columns: No., Type, H, M, S, ms. The table contains 10 rows of data. The first three rows are highlighted in cyan. The fourth row is partially visible. Below the table is a green bar with a "Write" button and a "Read" button. Below the green bar is another table with columns: No., Type, H, M, S, ms. The first three rows are highlighted in cyan. The fourth row is partially visible. Below this table is a "File" button and a "Comm" button.

No.	Type	H	M	S	ms
001	SPC	001			
002	PC	001	00	00	04
003	PC	002	00	00	06
004	PC	003	00	00	06
005	PC	005	00	00	18
006	PC	006	00	00	04
007	PC	005	00	00	18
008	PC	006	00	00	04
009	SPC	003			
010	PC	007	00	00	04

Write Read

No.	Type	H	M	S	ms
007	PC	005	00	00	18
008	PC	006	00	00	04
009	SPC	003			
010	PC	007	00	00	04

File Comm

コンボボックスに直接名称を入力するか、右側の▼で既存のファイルを選択します

※ 入力した文字がファイル名となります

(ファイル名に使用できない半角記号 ¥/:*?"<>| は入力できません)

[Write] をクリックして保存します

キャンセルするには、薄緑の部分をクリックします

The screenshot shows the RTK II software interface. At the top, it says "RTK II Version: 1.0.0.0". Below this is a table with columns: No., Type, H, M, S, ms. The table contains 10 rows of data. The first three rows are highlighted in cyan. The fourth row is partially visible. Below the table is a green bar with a "Write" button and a "Read" button. Below the green bar is another table with columns: No., Type, H, M, S, ms. The first three rows are highlighted in cyan. The fourth row is partially visible. Below this table is a "File" button and a "Comm" button. A combobox is visible above the "Write" button, containing the text "2021_10 Vecchio Bambino".


No.	Type	H	M	S	ms
001	SPC	001			
002	PC	001	00	00	04
003	PC	002	00	00	06
004	PC	003	00	00	06
005	PC	005	00	00	18
006	PC	006	00	00	04
007	PC	005	00	00	18
008	PC	006	00	00	04
009	SPC	003			
010	PC	007	00	00	04

2021_10 Vecchio Bambino

Write Read

No.	Type	H	M	S	ms
007	PC	005	00	00	18
008	PC	006	00	00	04
009	SPC	003			
010	PC	007	00	00	04


File Comm

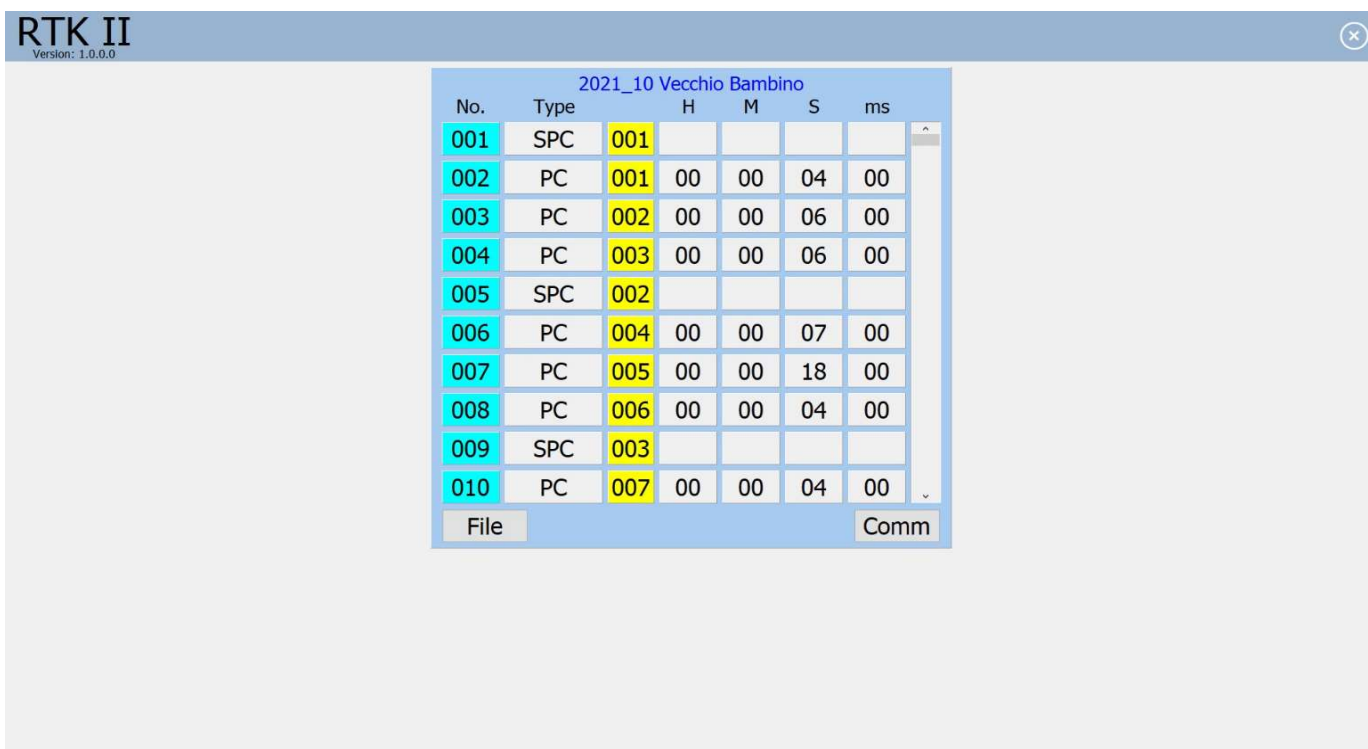

保存が完了すると設定画面上部にファイル名が表示されます

3-6. 設定の読み出し

設定を読み出すには [File] をクリックします

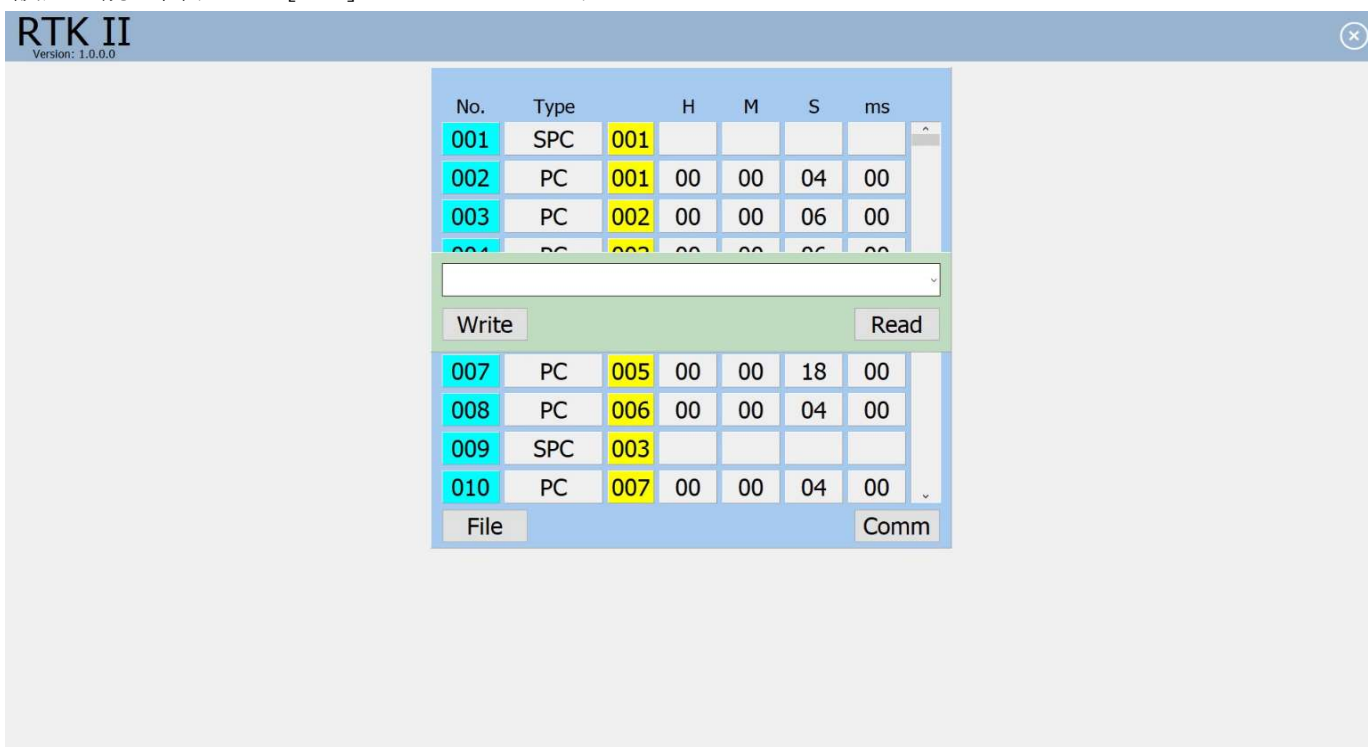


コンボボックスに直接名称を入力するか、右側の▼で既存のファイルを選択します

[Read] をクリックして読み出します


キャンセルするには、薄緑の部分をクリックします

3-7. 行の挿入と削除

挿入・削除したい行の No. をクリックします

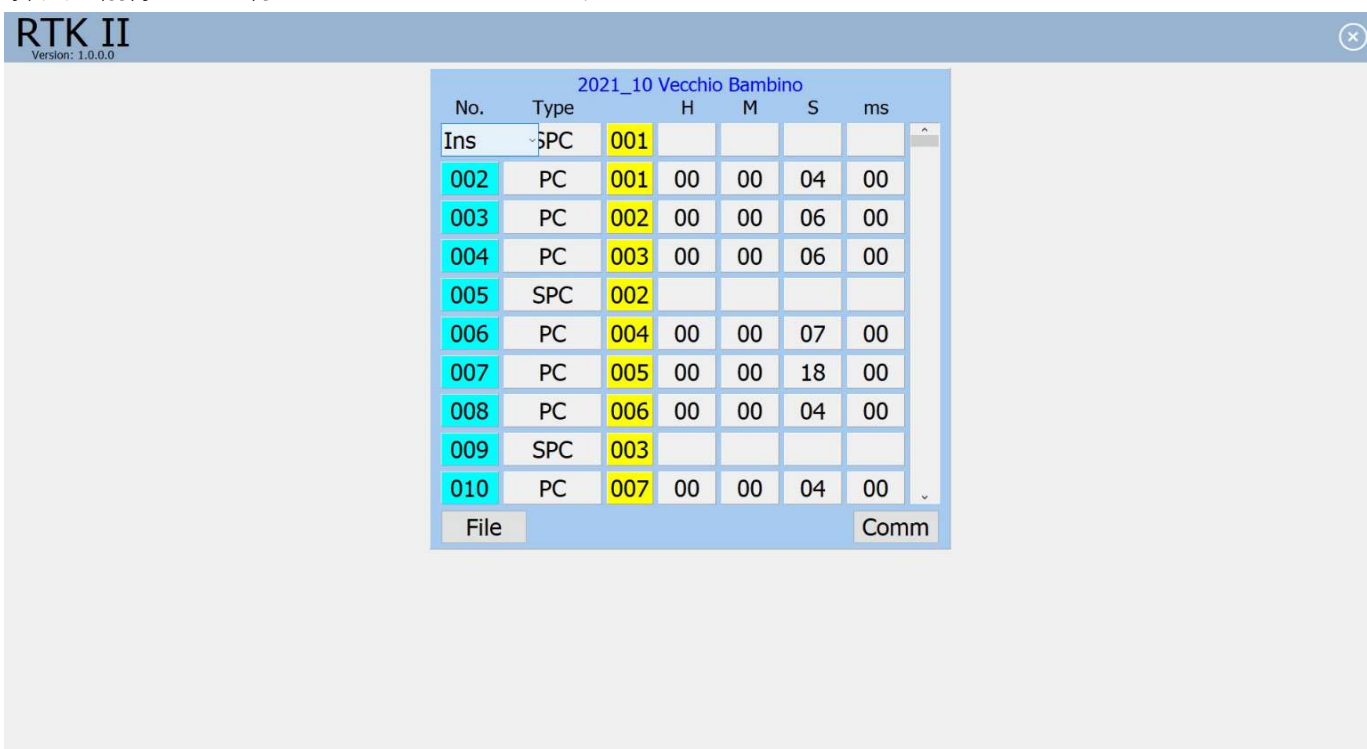


コンボボックスが表示されます

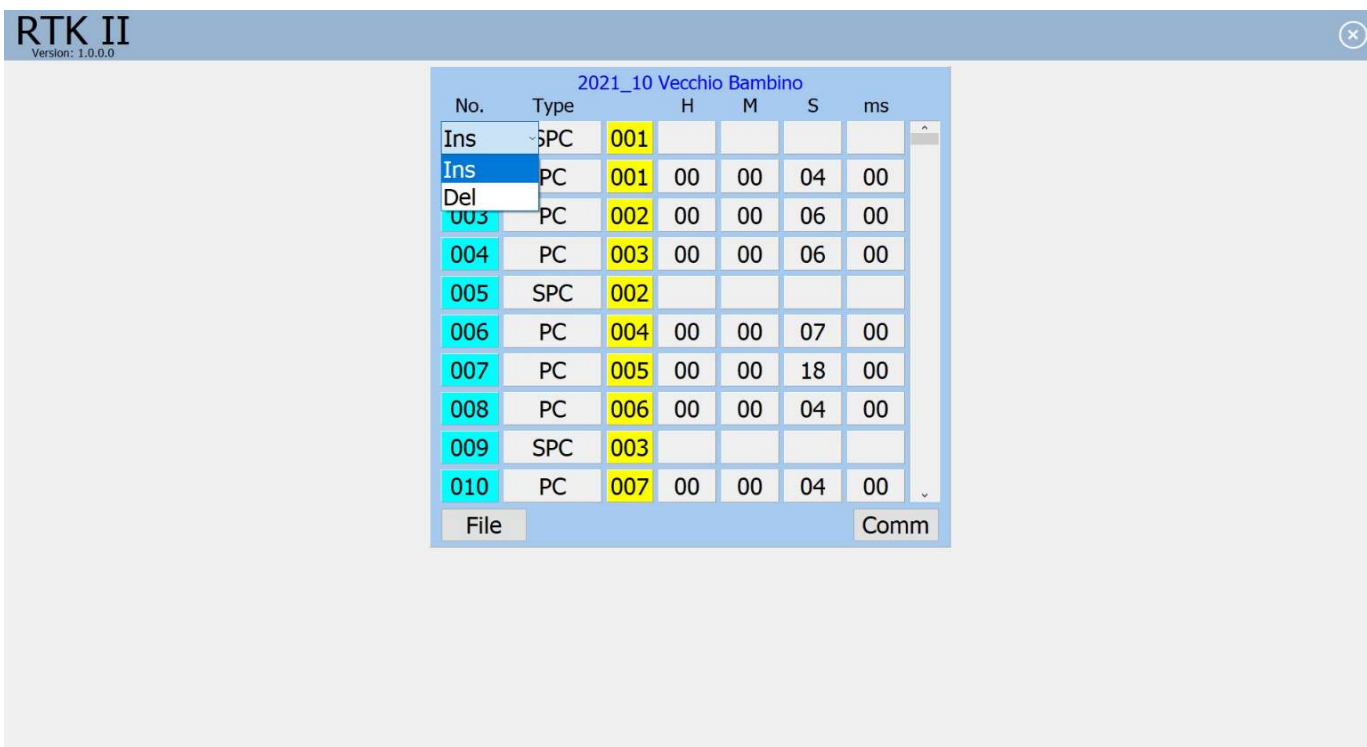

再度コンボボックスをクリックして Ins・Del を選択します

3-8. Rally Time Keeper への転送

Rally Time Keeper II へ転送するには [Comm] をクリックします

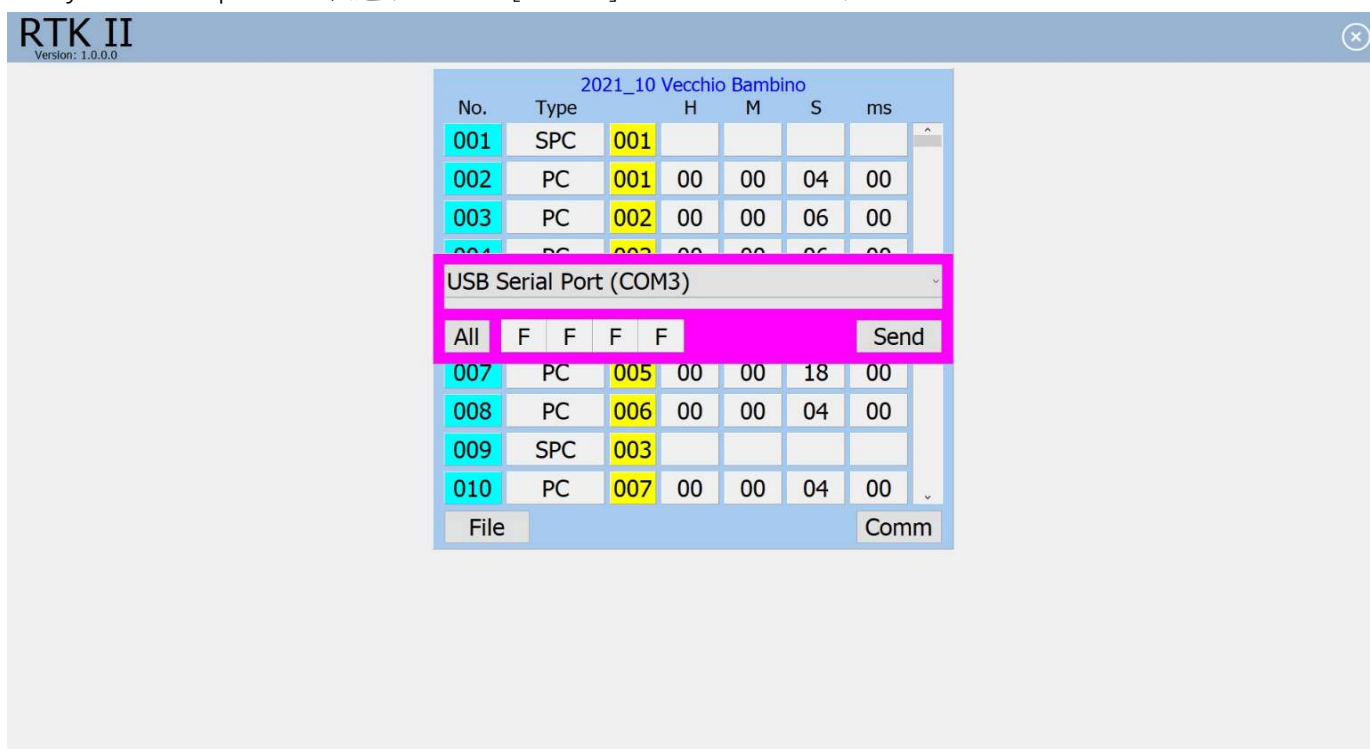


コンボボックスで通信ユニット (MONOSTICK) のポートを選択します

左下が All・F・F・F・F の場合、受信状態である全ての Rally Time Keeper II が受信します
[All] をクリックすると One・0・0・0・0 になります

0・0・0・0・0 を受信させたい Rally Time Keeper II の番号に合わせると、
その Rally Time Keeper II のみが受信します

キャンセルするには、赤紫の部分をクリックします

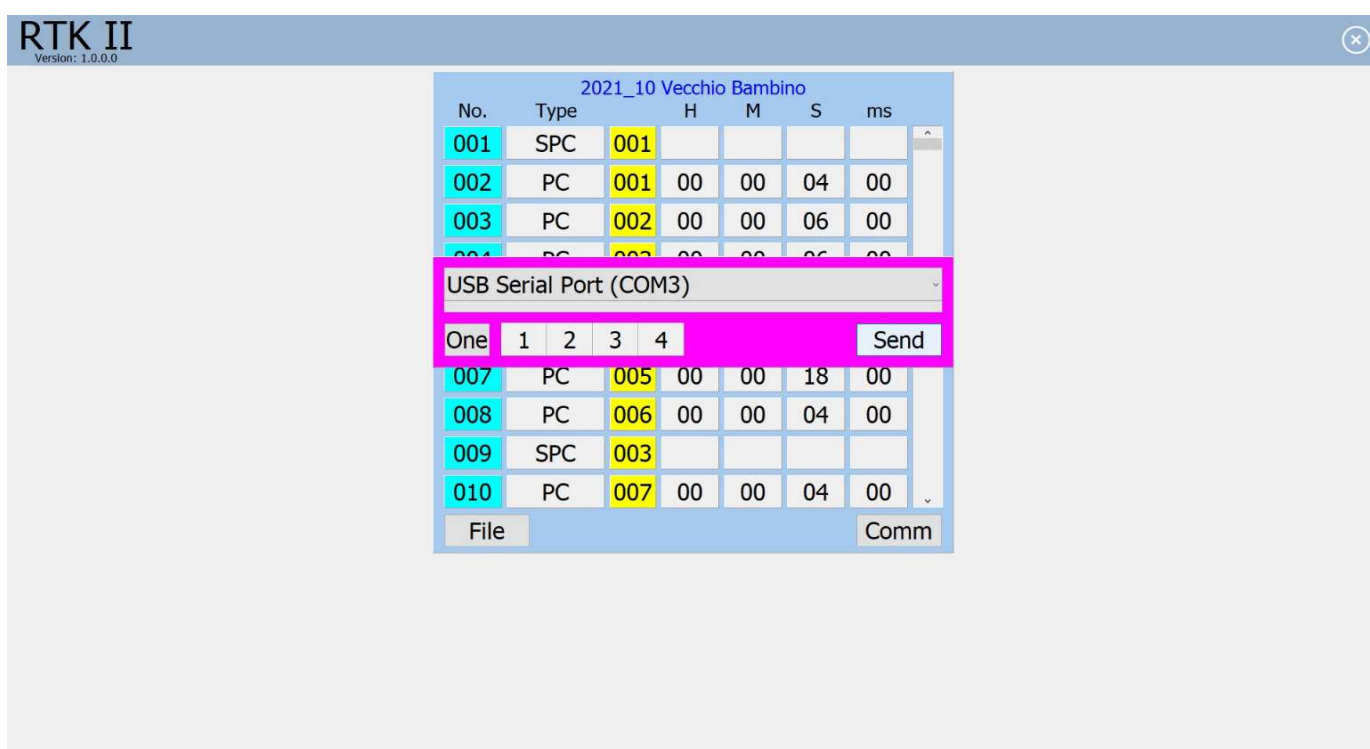

Rally Time Keeper を受信待ちにしてから [Send] をクリックして転送を開始します